

Instructions for Beebox indicator lights

When the PV STATUS Indicator stays on, it means that all optimizers are running normally, that is, the photovoltaic system is running normally. After pressing the STOP button, the PV STATUS Indicator turns off. It indicates that all optimizers have been turned off, that is, the photovoltaic system is no longer working.

When the beebox is connected to a 2.4G network, the NET Indicator flashes every 5 seconds.

When the main program of Beebox is running, the STATUS Indicator flashes per second.

When the Beebox is connected to the power supply, the POWER Indicator stays on.

