 
 



Door Panel & Accessories

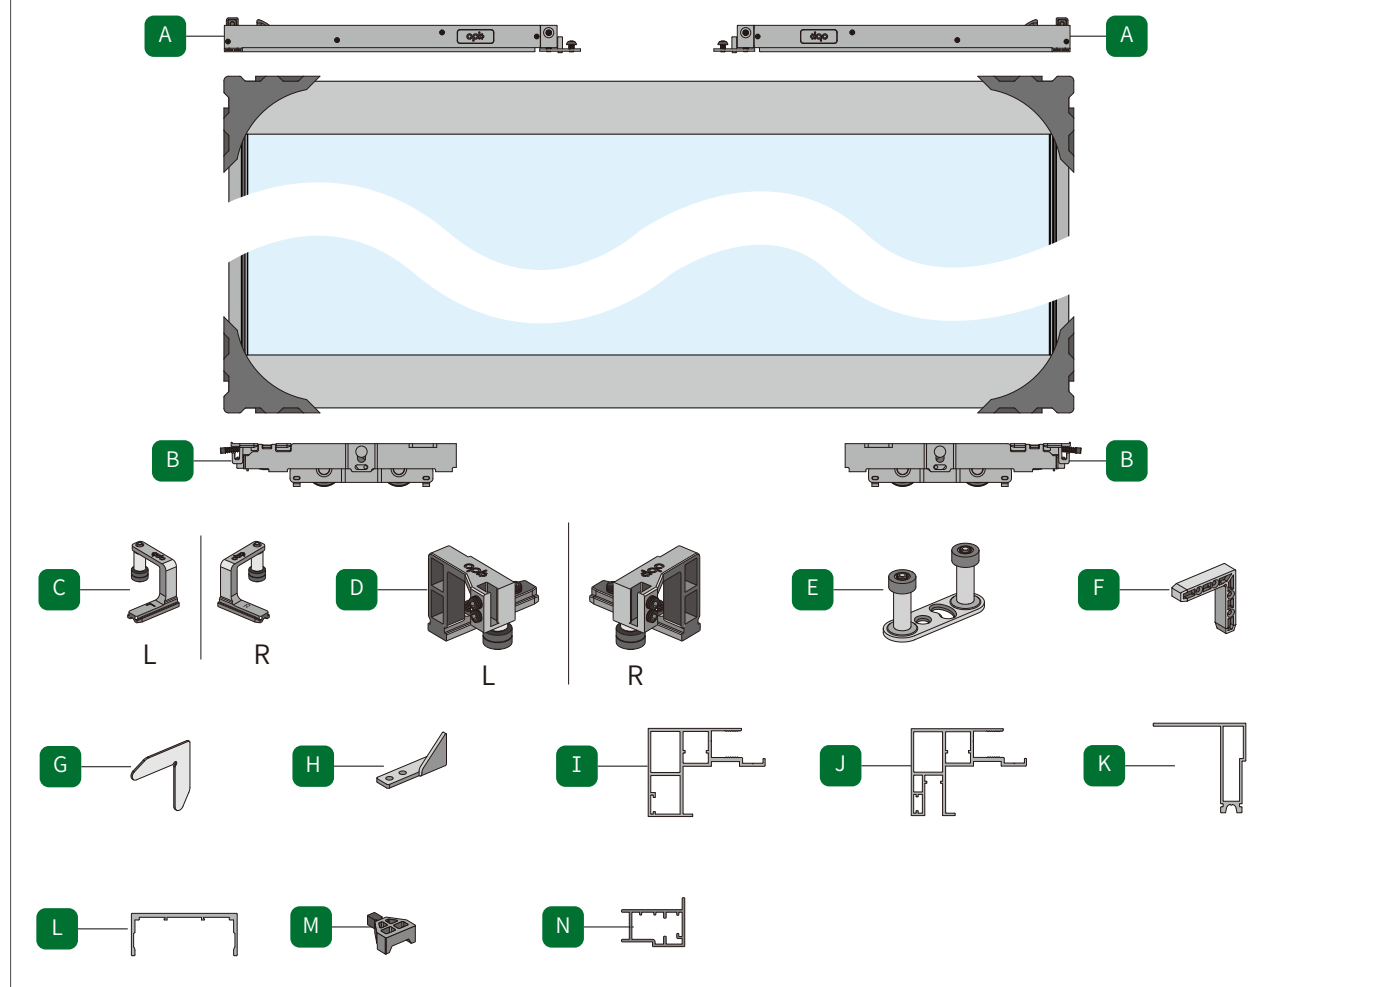


Door Opening Top View

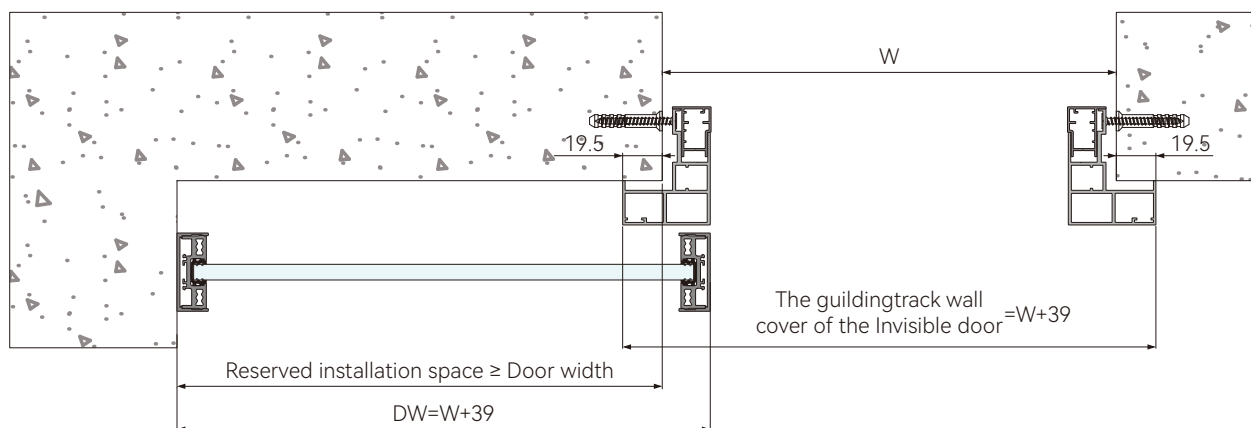

 
Door opening sectional view

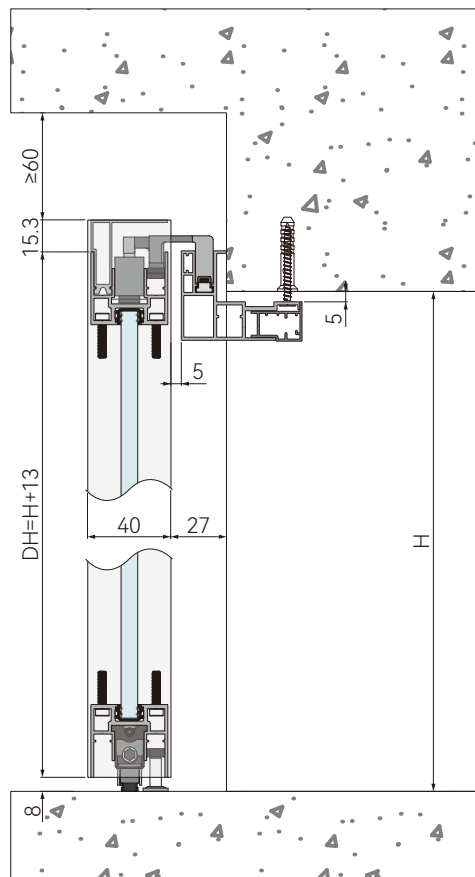

Door opening front view


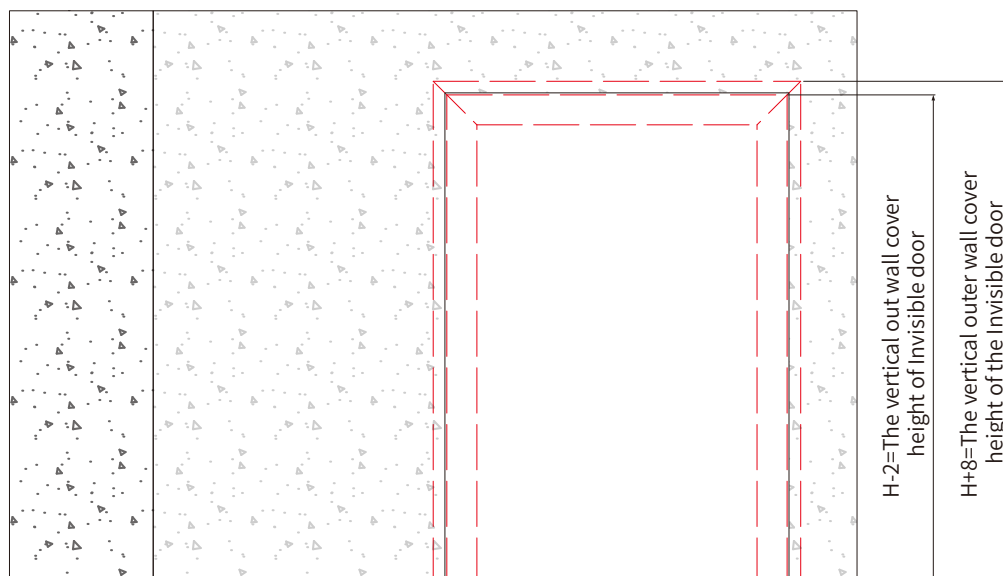


1 Cut the Profiles


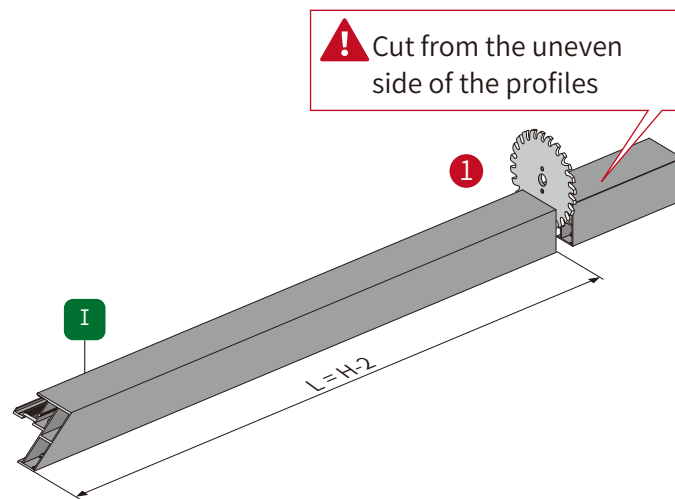


1-1 Door Profile Cutting


Flat plane back of the outside door cover shall be drilled to install the Angle code

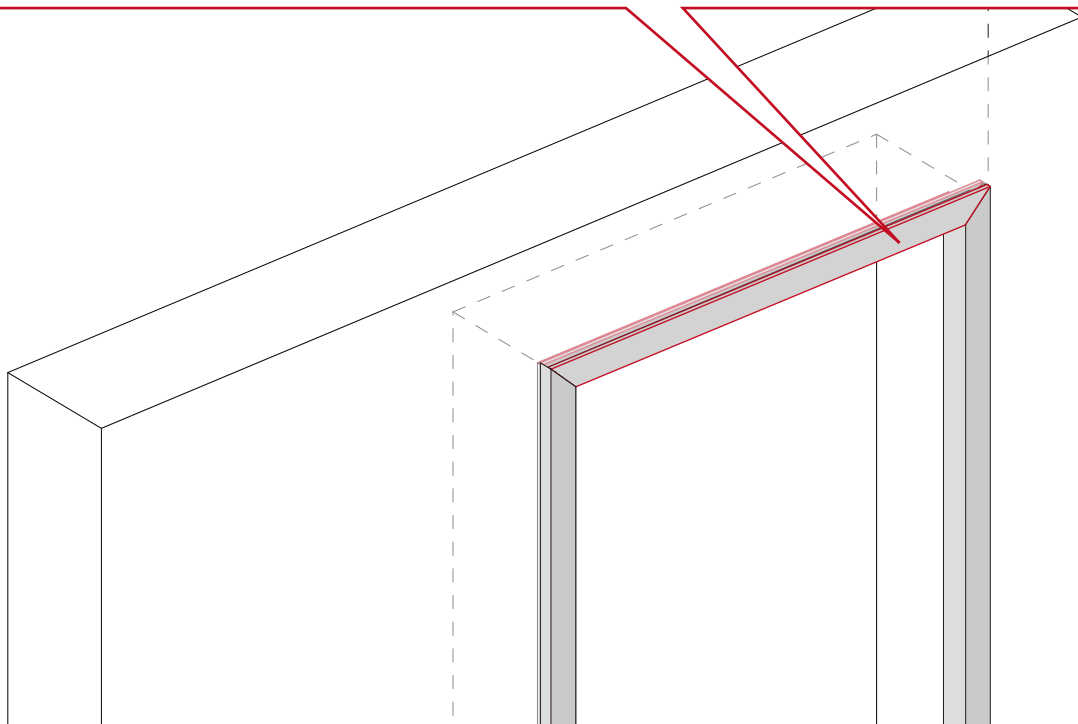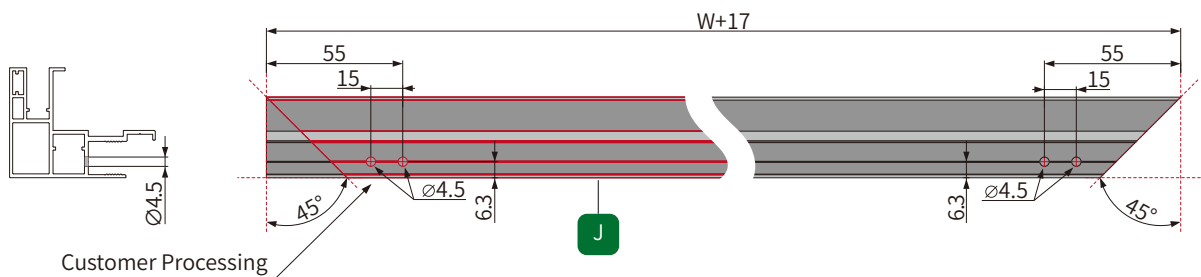

1-2 Door Profile Cutting

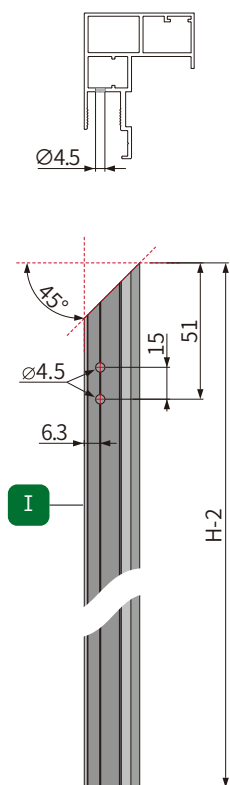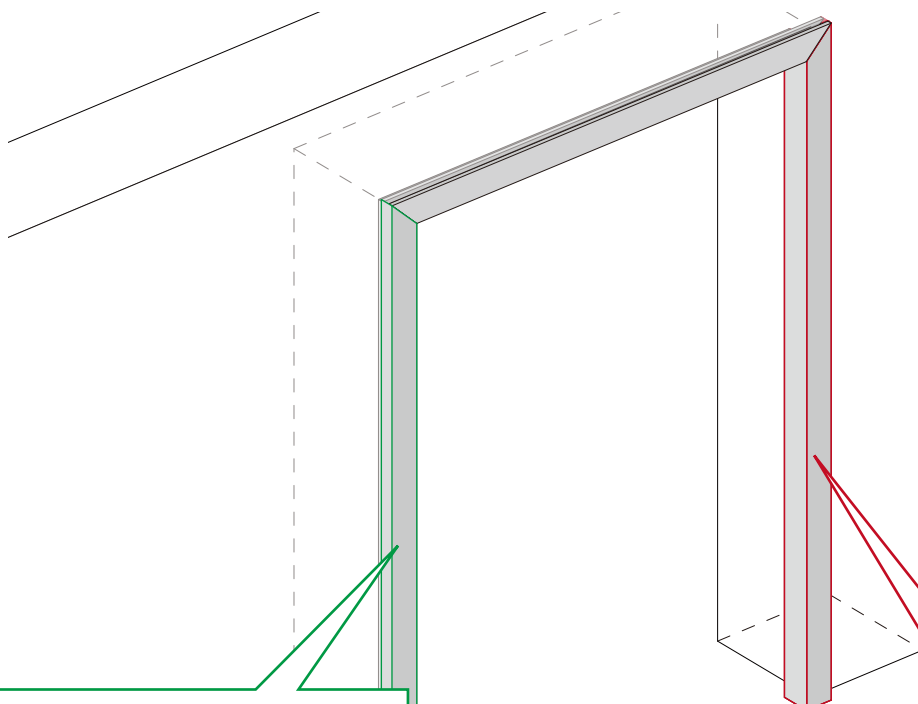


The back of the vertical outside cover needs to be drilled to install the corner bracket




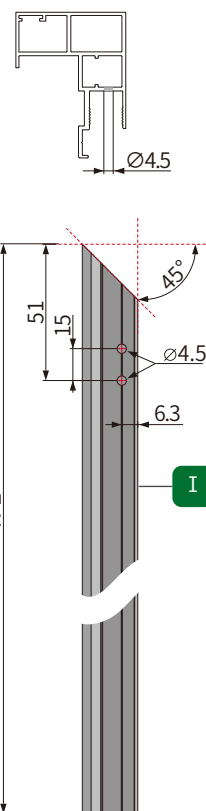


The back of the vertical outside cover needs to be drilled to install the corner bracket

2 Spliced Door Cover

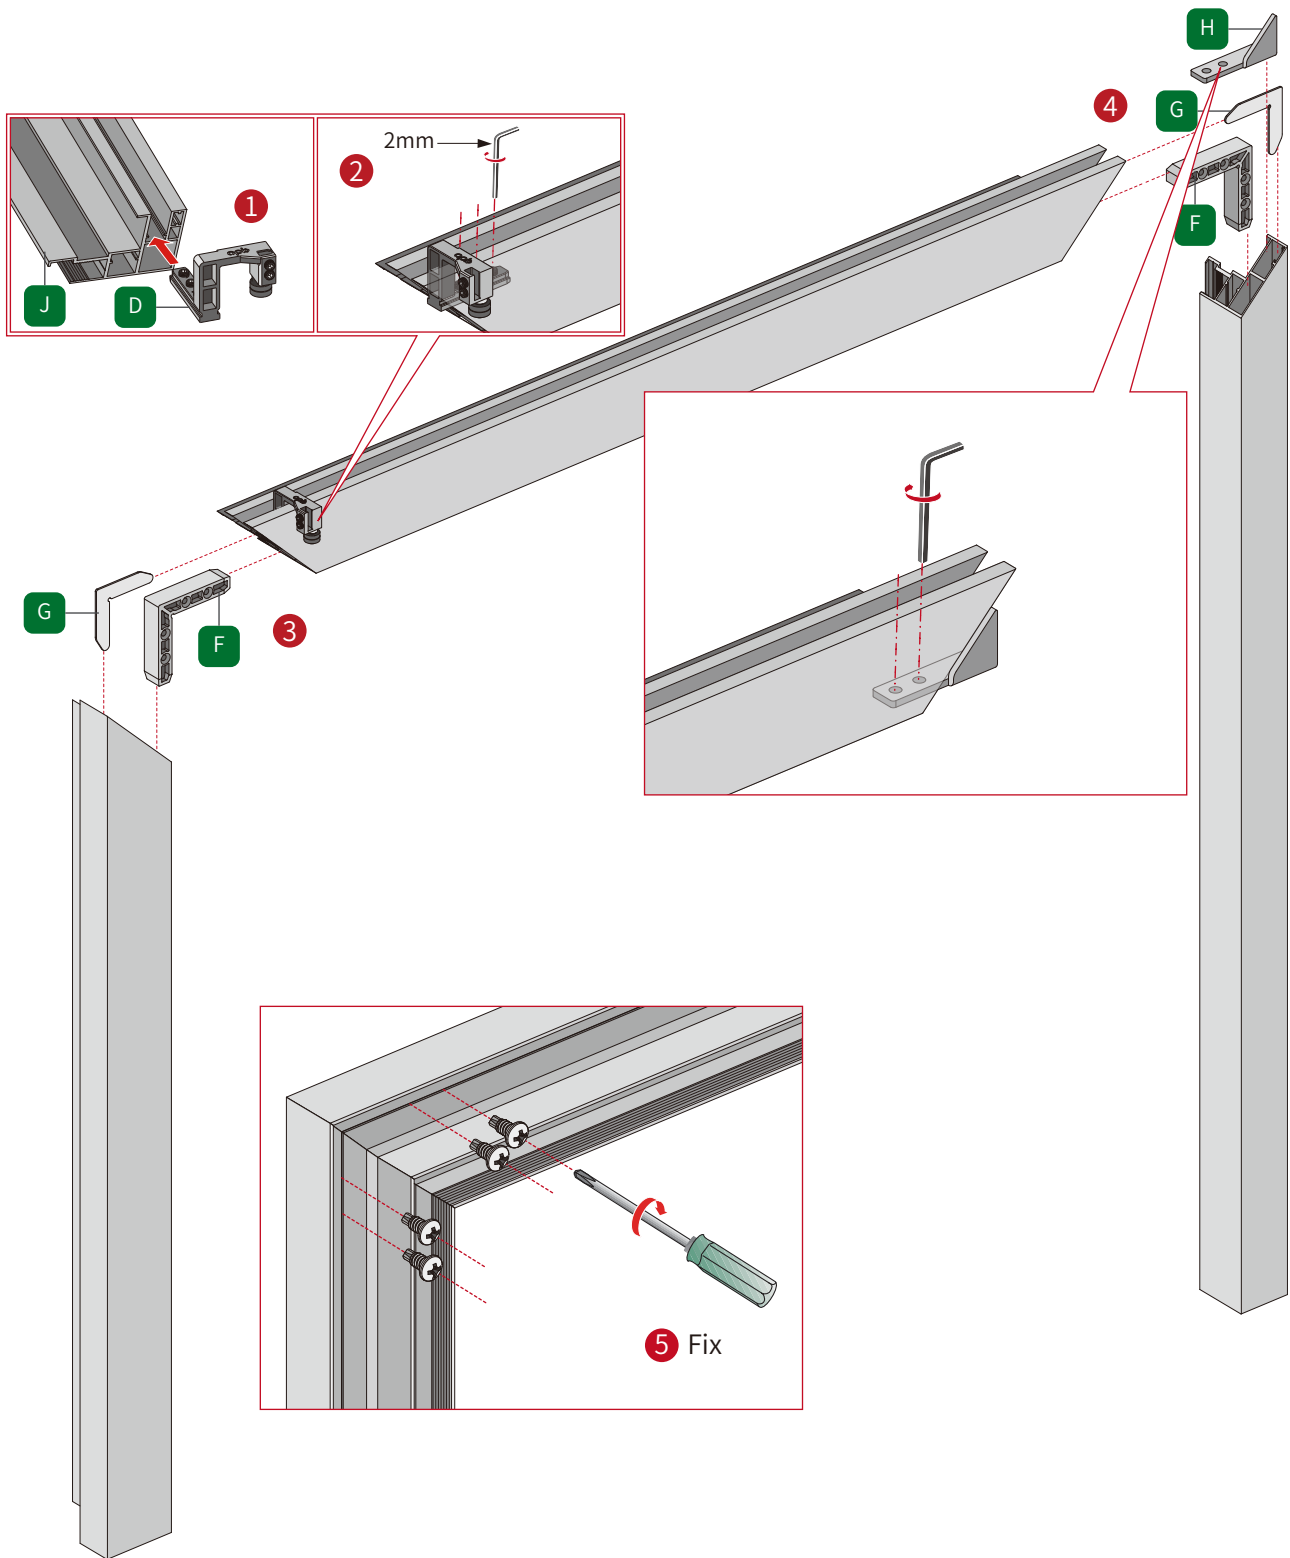


3 Install the Door Cover

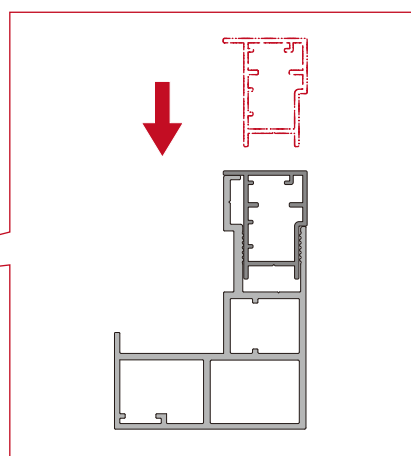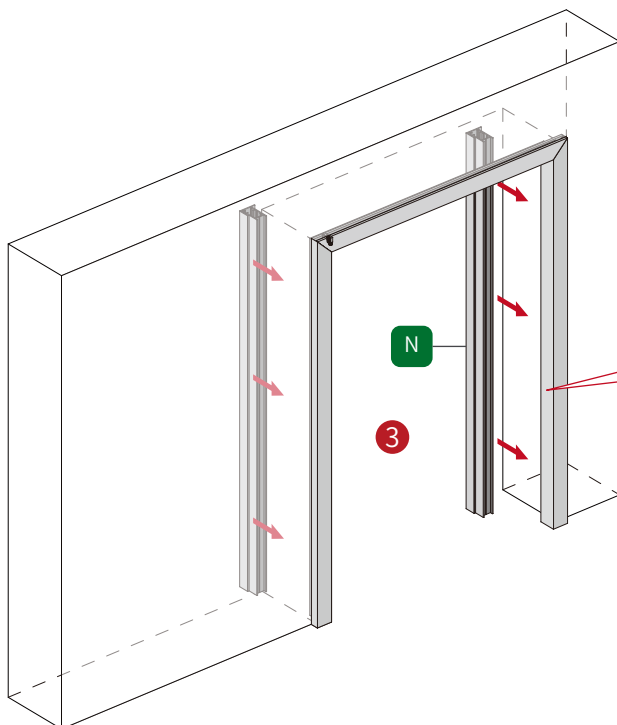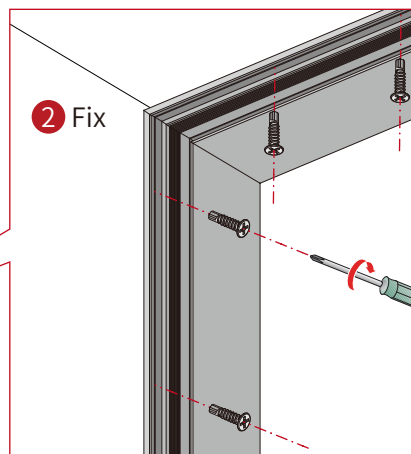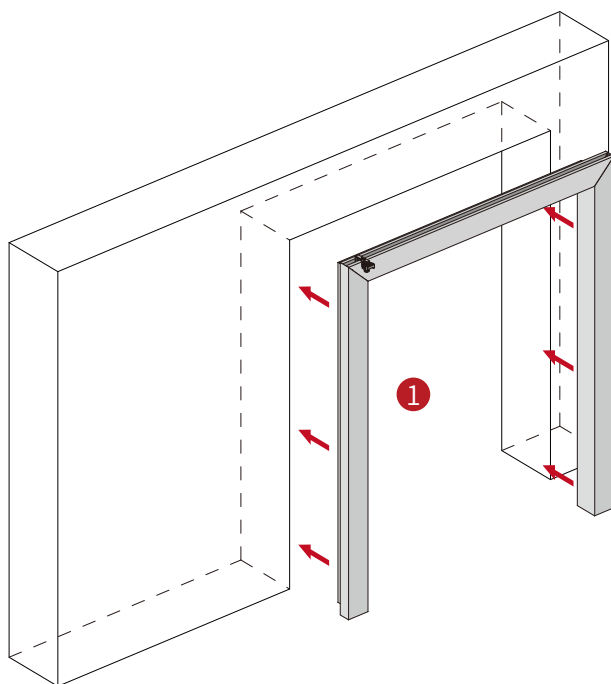


4

Install the Door


⚠ Please refer to the door body production manual for detailed installation

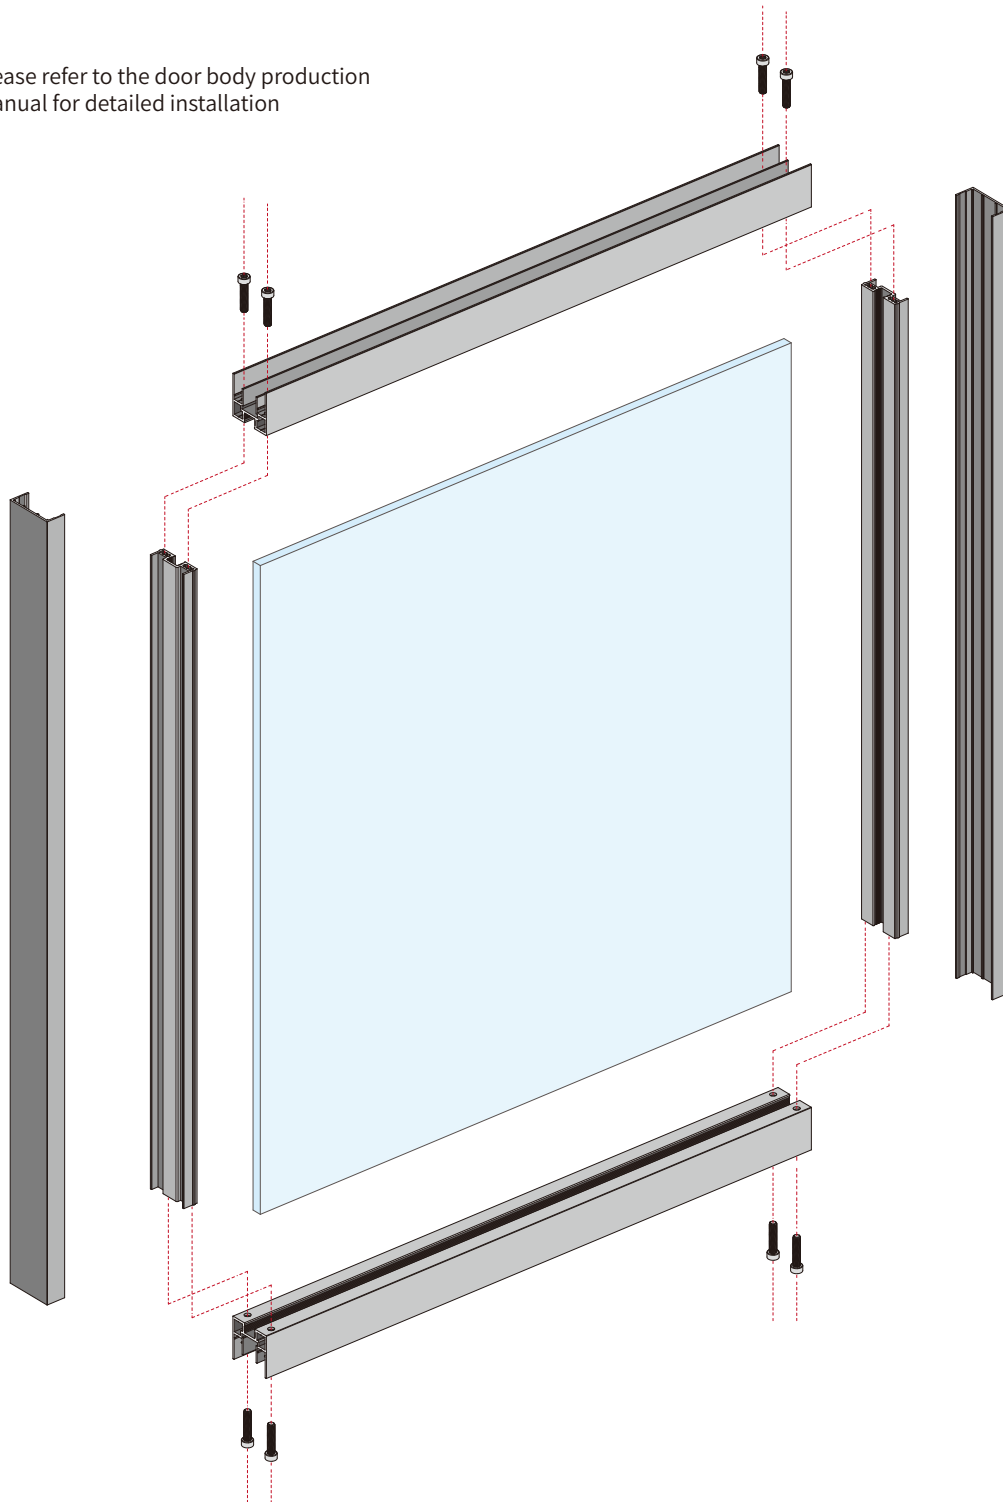


5 Install the Door Fitting Parts

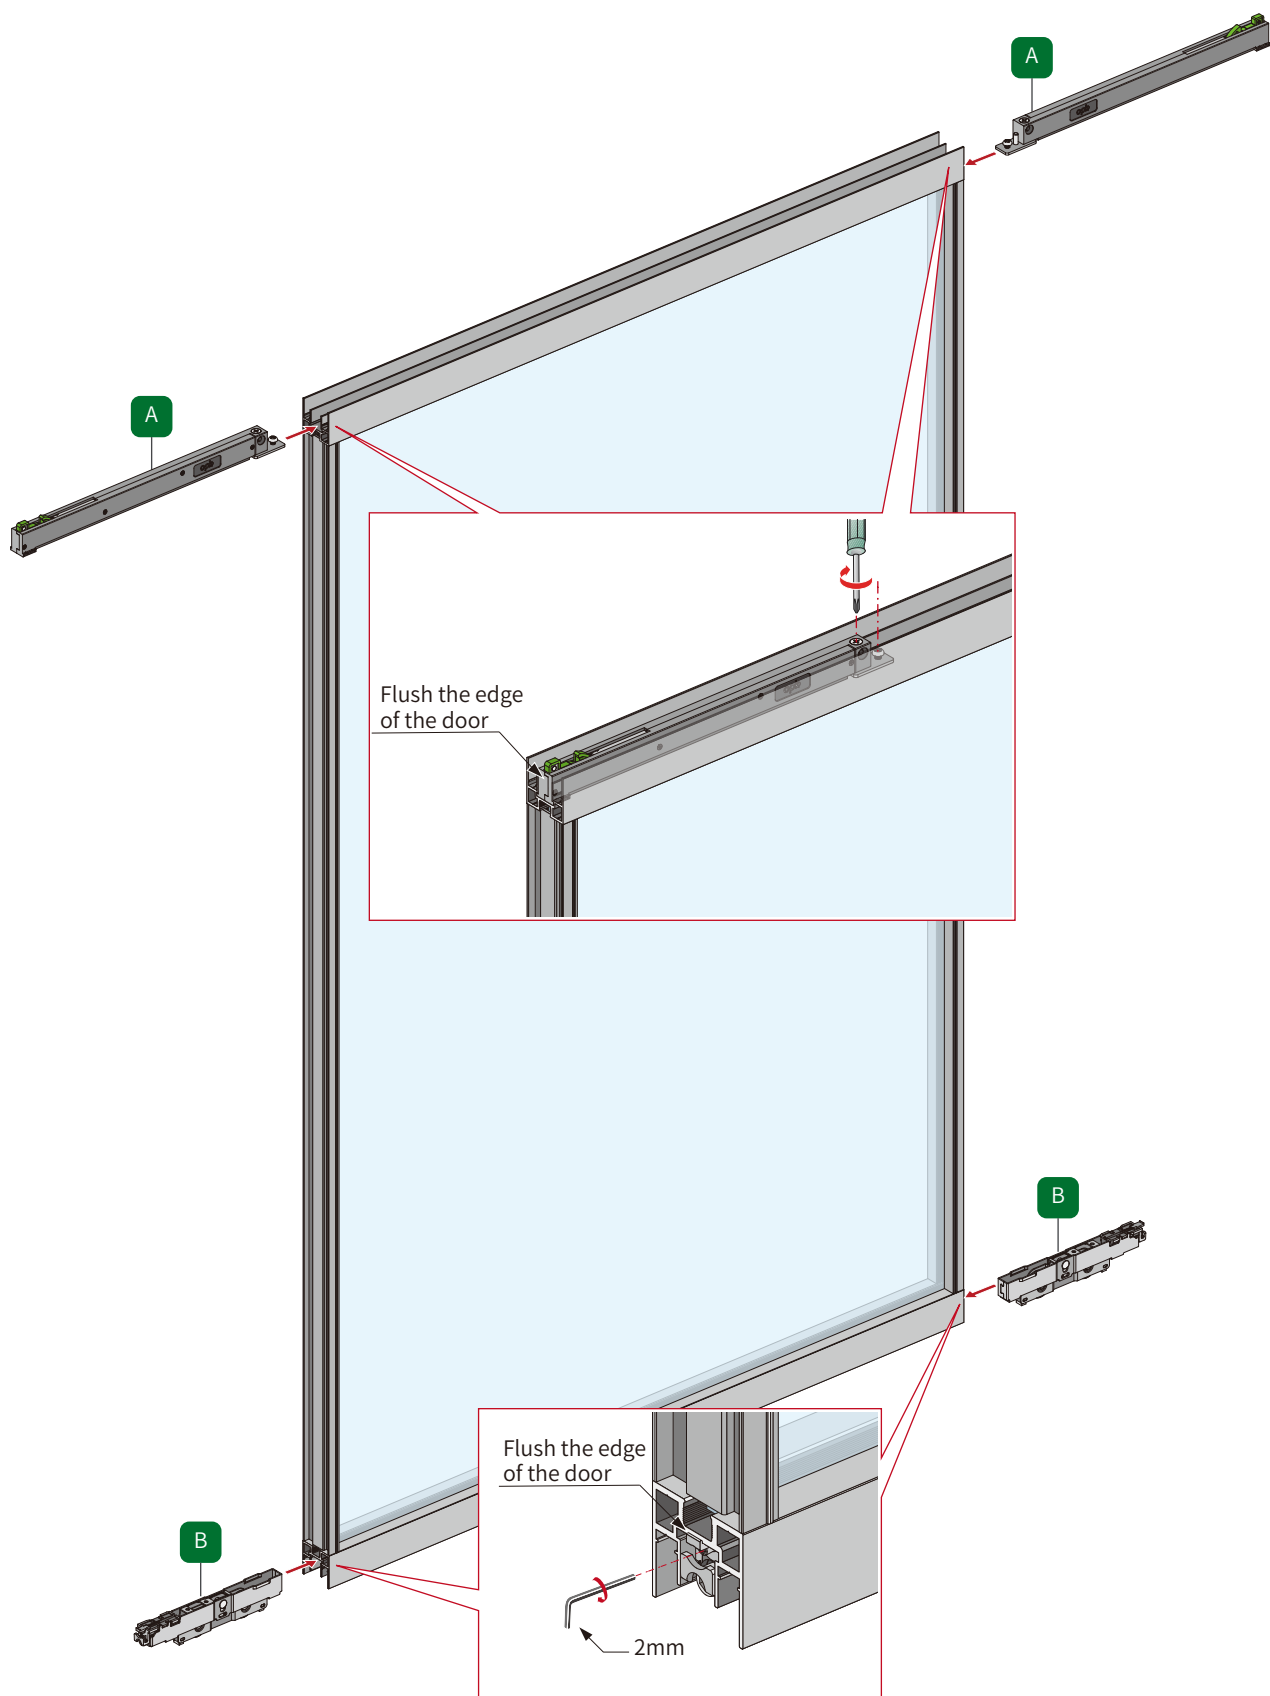




6 Install the Door

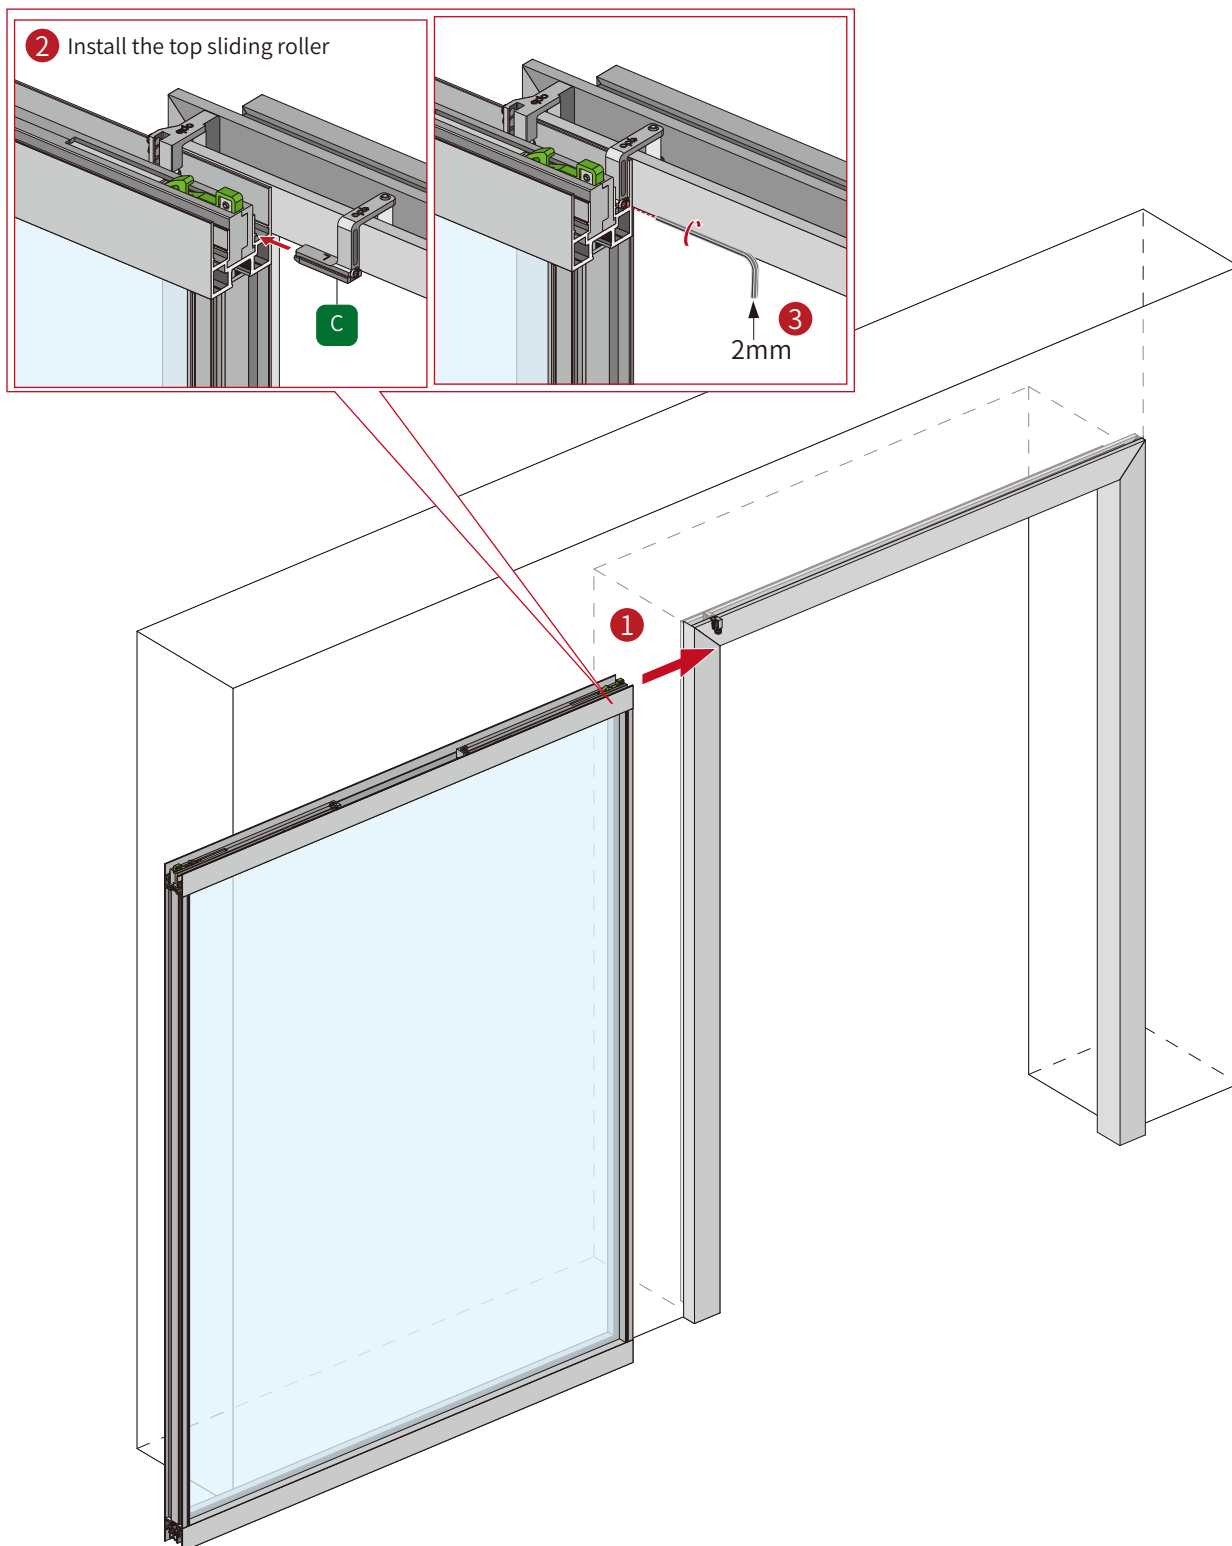


7 Install the Floor Guide Roller

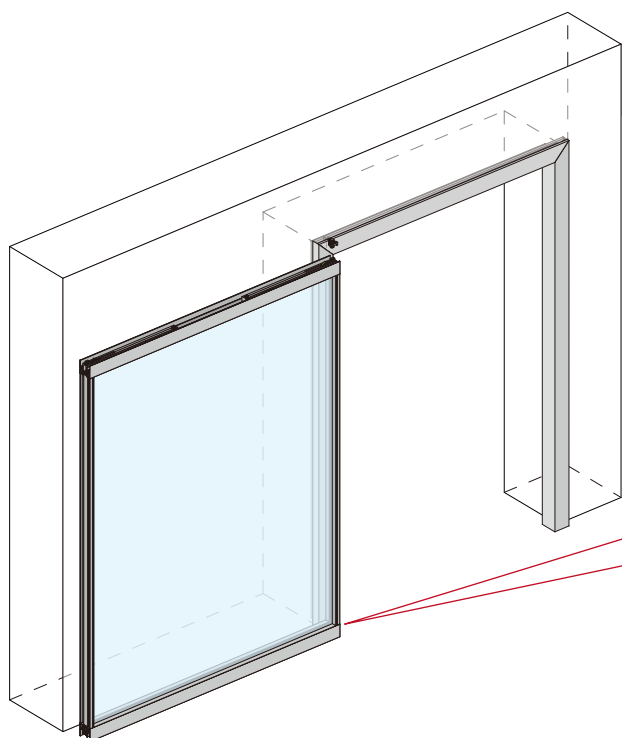


1 Flush door opening

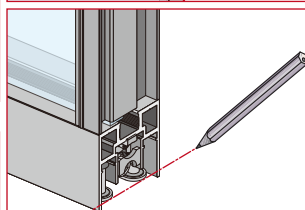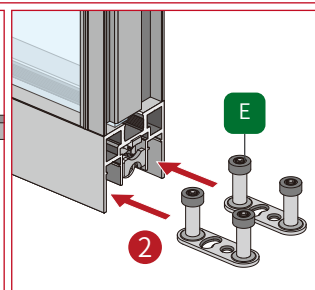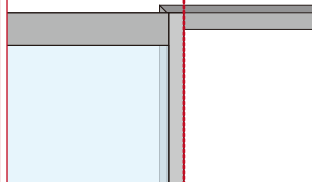


3 Line drawing positioning

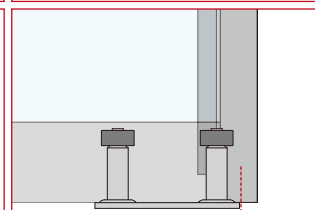




4 The bottom guide cannot exceed the door opening

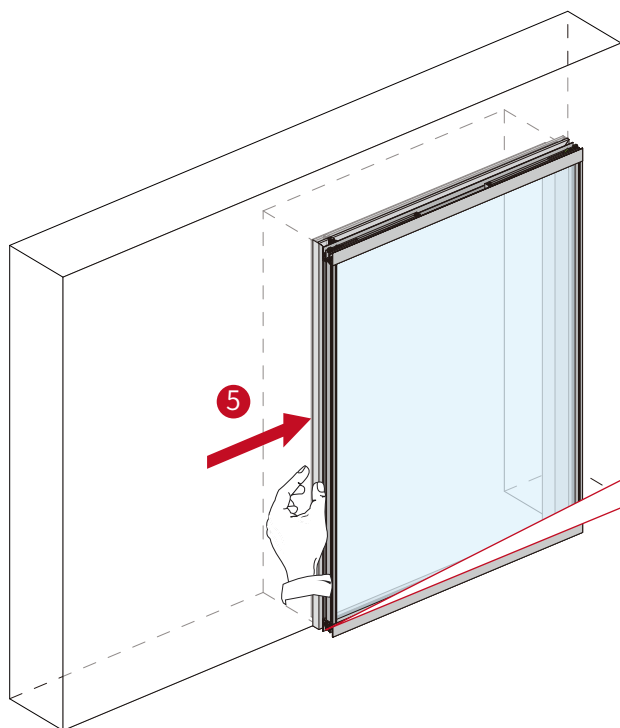


6 Drill holes

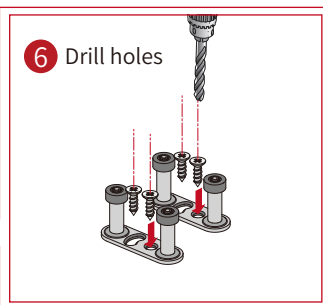


8 Install Stopper

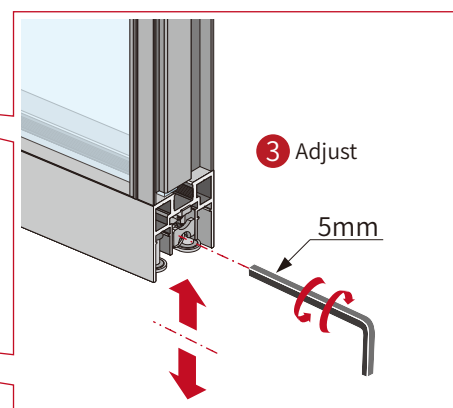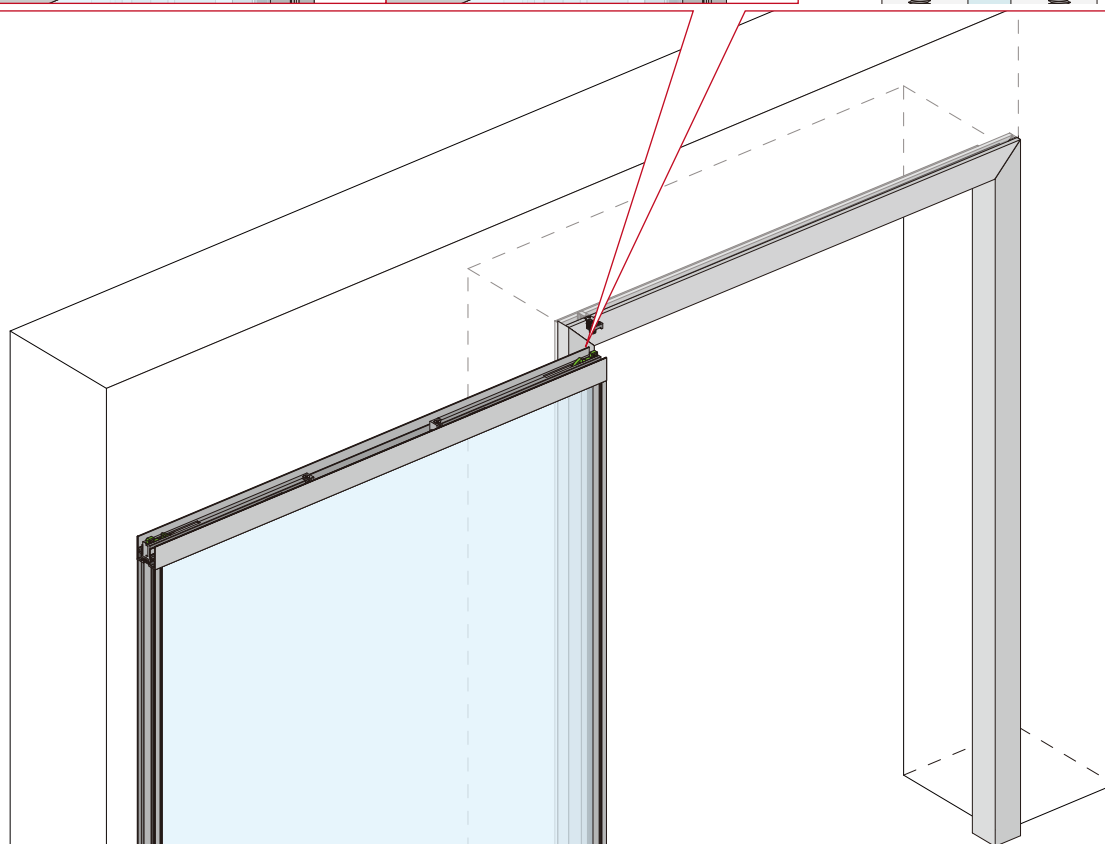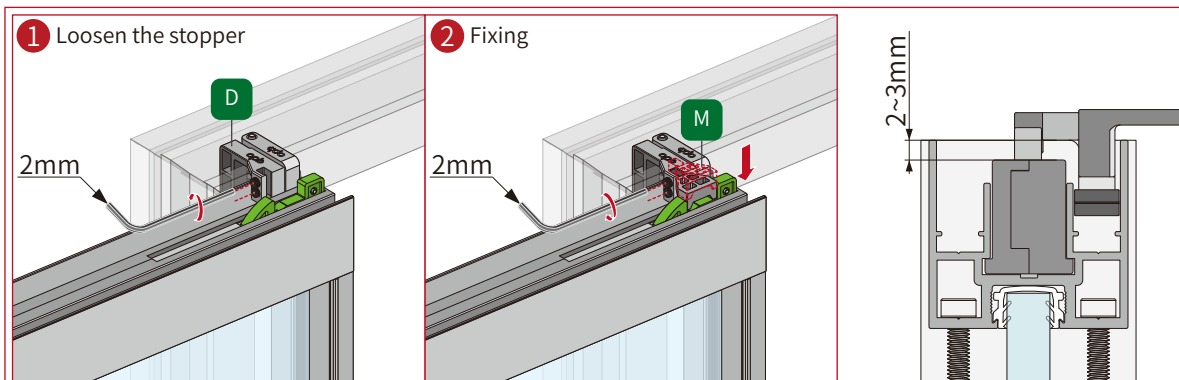

9 Adjust the Degree of Overlap

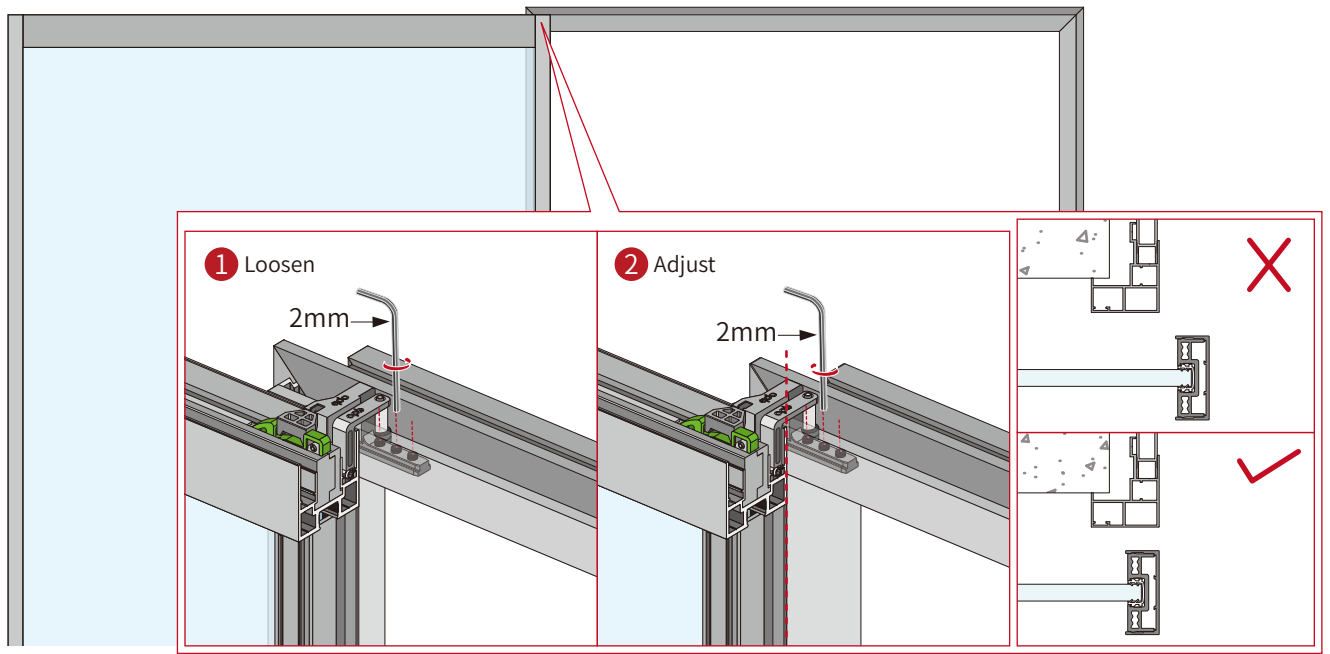

10 Install Horizontal Trim Cover

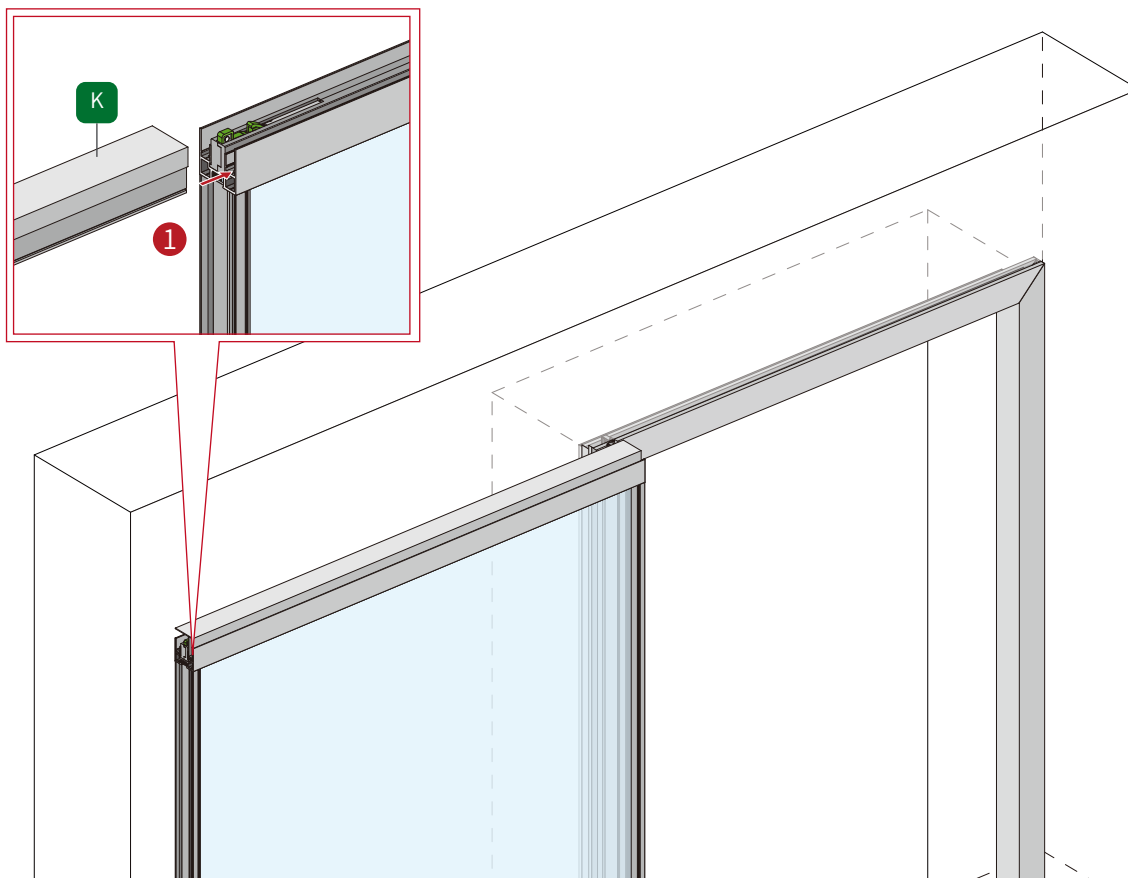

11 Install Vertical Trim Cover

